




# Installation Instructions

## TriView™ With Soil Anchor (TVFA)


**CAUTION:** Use and wear the correct safety equipment. Please read and follow instructions for your safety.

*In most cases the Rhino TriView with Soil Anchor (TVFA) can quickly be installed in four easy steps.*

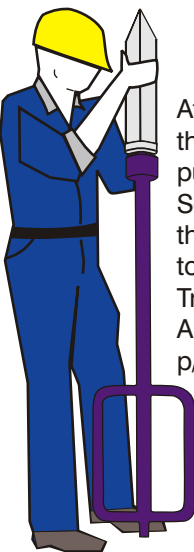


**Step 1**

After removing the transport pin, put the TriView Soil Anchor on the installation tool.  
TriView Soil Anchor Driver p/n TVAD-300

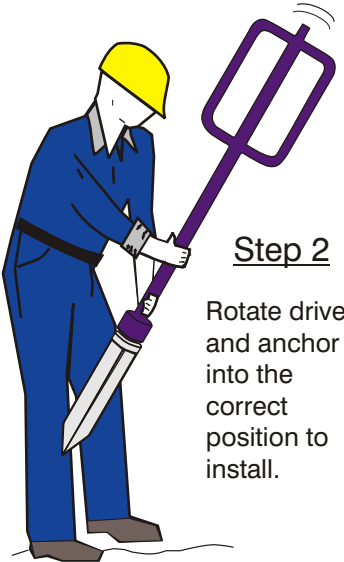


**Step 2**

Rotate driver and anchor into the correct position to install.

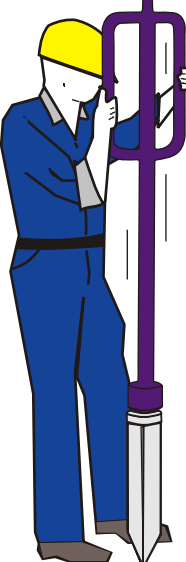

**Step 3**


Drive Anchor into the ground by raising and dropping slide hammer. Repeat until top of Anchor is flush with ground.

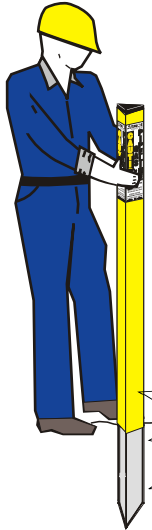

**Step 4**

Insert the post to the bottom of the anchor and pull up to lock in place.

Replace transport pin before transporting TVAD-300

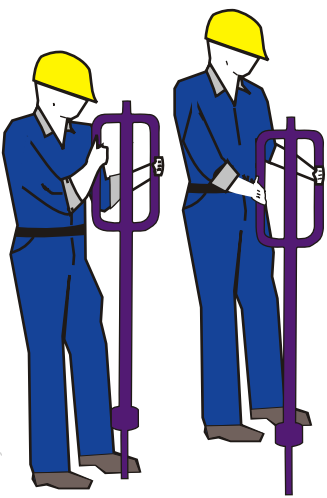

**Hardpan or Rocky Soil Installation**

The TVAD-300 Driver is also a quick way to prepare the ground when a starter hole is necessary. Follow this procedure:

- Align driver spade in the position you wish to install the anchor.
- Use blows until spade is driven into the ground and driver stop is level with the ground.
- Remove driver with upward stroke and proceed with normal installation of anchor.

